




Linux SDK Reference Guide

Label Printer

Rev. 1.00

SLP-TX400/SLP-TX403
SLP-TX420/SLP-TX423
SLP-TX220/SLP-TX223
SLP-DX420/SLP-DX423
SLP-DX220/SLP-DX223
SLP-DL410/SLP-DL413
SRP-770II

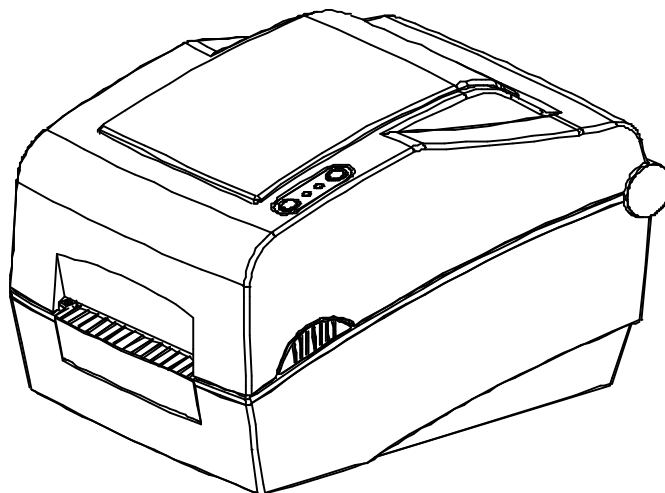

<http://www.bixolon.com>

Table of Contents

1. About This Manual	3
1-1 Supported Kernel & Platforms	3
1-2 Supported Interfaces	3
2. Property	4
2-1 CharacterSet & International CharacterSet(LONG R/W)	4
2-2 State (LONG R)	6
3. Method	7
3-1 ConnectToPrinter	7
3-2 DisconnectPrinter	8
3-3 InitializePrinter	8
3-4 FeedOneLabel	9
3-5 SetSpeed	10
3-6 SetDensity	11
3-7 SetOrientation.....	12
3-8 SetCutter	13
3-9 SetBackFeed	14
3-10 SetPaper.....	15
3-11 SetMargin.....	16
3-12 SetOffset.....	17
3-13 PrintDeviceFont	18
3-14 PrintDeviceFontW	20
3-15 PrintVectorFont	22
3-16 PrintVectorFontW.....	24
3-17 Prints	27
3-18 Print1DBarcode	28
3-19 PrintMaxiCode	30
3-20 PrintPDF417	31
3-21 PrintQRCode	33
3-22 PrintDataMatrix	35
3-23 PrintAztec	36
3-24 PrintCode49.....	38
3-25 PrintCODABLOCK.....	40
3-26 PrintMicroPDF	42
3-27 PrintGS1DataBar	44
3-28 PrintBlock	46
3-29 PrintCircle	48
3-30 PrintImage	49
3-31 DirectIO	50
3-32 CalibrateMedia.....	51
3-33 ResetPrinter.....	52
3-34 ClearBuffer.....	53

1. About This Manual

This SDK manual describes the contents of the library required to develop Linux OS application programs.

At BIXOLON, we are constantly making improvements to the functions and quality of our products. The specifications and contents of this manual are subject to change without prior notice for this reason.

1-1 Supported Kernel & Platforms

* Supported Kernel Versions

- Kernel 2.6.32 or higher

* Supported Platforms

- Linux 32bit

- Linux 64bit

- Raspberry PI

1-2 Supported Interfaces

- USB, Serial, Parallel, Bluetooth, Ethernet, WLAN

2. Property

The constants used by the library are declared in BxlLabelConst.h. The development environment is based on C.

2-1 CharacterSet & International CharacterSet(LONG R/W)

This is the property for defining the printer's code page and International character Set and set to CS_CP437 and ICS_USA by default. The values can be set using SetCharacterSet().

The following code pages can be used:

Constant	Value	Description
CS_CP437	0	U.S.A
CS_CP850	1	Latin 1
CS_CP852	2	Latin 2
CS_CP860	3	Portuguese
CS_CP863	4	Canadian French
CS_CP865	5	Nordic
CS_WPC1252	6	Latin I
CS_CP865_WCP1252	7	European Combined
CS_CP857	8	Turkish
CS_CP737	9	Greek
CS_WCP1250	10	Latin 2
CS_WCP1253	11	Greek
CS_WCP1254	12	Turkish
CS_CP855	13	Cyrillic
CS_CP862	14	Hebrew
CS_CP866	15	Cyrillic
CS_WCP1251	16	Cyrillic
CS_WCP1255	17	Hebrew
CS_CP928	18	Greek
CS_CP864	19	Arabic
CS_CP775	20	Baltic
CS_WCP1257	21	Baltic
CS_CP858	22	Latin 1 + Euro

The following International character Set can be used:

Constant	Value	Description
ICS_USA	0	USA code
ICS_FRANCE	1	FRANCE code
ICS_GERMANY	2	GERMANY code
ICS_UK	3	UK code
ICS_DENMARK_I	4	DENMARK1 code
ICS_SWEDEN	5	SWEDEN code
ICS_ITALY	6	ITALY code
ICS_SPAIN_I	7	SPAIN code
ICS_NORWAY	8	NORWAY code
ICS_DENMARK_II	9	DENMARK 2 code
ICS_JAPAN	10	JAPAN code
ICS_SPAIN_II	11	SPAIN 2 code
ICS_LATIN	12	LATIN code
ICS_KOREA	13	KOREA code
ICS_SLOVENIA	14	SLOVENIA code
ICS_CHINA	15	CHINA code

* Example

```
int ret;  
  
ret = ConnectPrinter ("portinfo...");  
  
.....  
  
SetCharacterSet(CS_PC850, ICS_UK);  
  
.....
```

2-2 State (LONG R)

This is the property that sets the printer status and calls the CheckPrinterStatus function to check the printer status and receive the data. The status value can be set in duplicate and each value can be checked using bitwise operation.

These are the printer status values:

Constant	Value	Description
STS_NORMAL	0	Printer ready
STS_RIBONEND	4	Ribbon end error
STS_GAPERROR	8	Unable to recognize gap(auto sensing failure)
STS_TPHOVERHEAT	16	TPH overheat
STS_CUTTERJAM	32	Cutter jammed
STS_COVEROPEN	64	Cover open
STS_PAPEREMPTY	128	No paper

* Example

```
int ret;  
  
ret = ConnectToPrinter ("portinfo...");  
.....  
  
int state;  
  
state = CheckPrinterStatus();  
  
if ((state & STS_RIBONEND) == STS_RIBONEND)  
    .....  
  
if ((state & STS_GAPERROR) == STS_GAPERROR)  
    .....  
.....
```

3. Method

The functions provided by Linux SDK are declared in BxlLabelAPI.h.
The development environment is based on C.

3-1 ConnectToPrinter

Set the connection for communication with the printer.

```
int ConnectToPrinter(const char *port)
```

[Parameters]

* const char *port
[in] Interface to be connected to the printer

Interface	Input Data	Example
USB	USB:	ConnectToPrinter("USB:")
Serial	serial:(baudrate) /dev/ttyX:(baudrate)	ConnectToPrinter("serial:115200") ConnectToPrinter("/dev/tty0:115200")
Parallel	parallel /dev/lpX	ConnectToPrinter("parallel") ConnectToPrinter("/dev/lp0")
Bluetooth	Device MAC address	ConnectToPrinter("7d:f0:7d:e4:e0:78")
Ethernet, Wifi	IP address, port no.	ConnectToPrinter("192.168.0.10:9100")

[Return Values]

Constant	Value	Description
SUCCESS	0	The operation is successful.
PORT_OPEN_ERROR	-99	The communication port cannot be opened.
NO_CONNECTED_PRINTER	-100	The printer is not connected.
NO_BIXOLON_PRINTER	-101	It is not a BIXOLON printer.

* Example

```
int ret;  
  
// USB  
ret = ConnectToPrinter("USB:");  
  
// Serial  
ret = ConnectToPrinter("serial:115200");  
  
// Parallel  
ret = ConnectToPrinter("parallel");  
  
// bluetooth  
ret = ConnectToPrinter("7d:f0:7d:e4:e0:78");  
  
// Ethernet or WiFi  
ret = ConnectToPrinter("192.168.0.10:9100");  
.....
```

3-2 DisconnectPrinter

Disconnect the printer.

int DisconnectPrinter()

[Parameters]

None

[Return Values]

None

* Example

```
ConnectToPrinter("portinfo...");  
.....  
DisconnectPrinter();
```

3-3 InitializePrinter

Initialize the printer.

int InitializePrinter();

[Parameters]

None

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
ret = ConnectToPrinter("portinfo...");  
.....  
InitializePrinter();  
.....
```


3-4 FeedOneLabel

Feed a label.

int FeedOneLabel ()

[Parameters]

None

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
ret = FeedOneLabel();  
  
.....
```

3-5 SetSpeed

Set the speed.

int SetSpeed(int speed)

[Parameters]

* int speed
[in] Printing speed

Constant	Value	Description
SPEED_25	0	2.5 ips
SPEED_30	1	3.0 ips
SPEED_40	2	4.0 ips
SPEED_50	3	5.0 ips
SPEED_60	4	6.0 ips
SPEED_70	5	7.0 ips
SPEED_80	6	8.0 ips

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetSpeed(SPEED_60);  
  
.....
```

3-6 SetDensity

Set the density.

```
int SetDensity(int density)
```

[Parameters]

* int density
[in] Printing density (0 ~ 20)

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetDensity(20);  
  
.....
```

3-7 SetOrientation

Set the orientation.

int SetOrientation(int orientation)

[Parameters]

* int orientation
[in] Printing orientation

Constant	Value	Description
TOP_TO_BOTTOM	84	Print from top to bottom.
BOTTOM_TO_TOP	66	Print from bottom to top.

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetOrientation(TOP_TO_BOTTOM);  
  
.....
```

3-8 SetCutter

Set the cutting options.

int SetCutter(bool autoCut, int cutPeriod)

[Parameters]

* bool autoCut
[in] Enable/disable auto cutting. false: disable auto cutting, true: enable auto cutting

* int cuttingPeriod
[in] Cut interval

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetCutter(false, 0);  
  
.....
```

3-9 SetBackFeed

Set the back-feeding options.

int SetBackFeed(bool backFeed)

[Parameters]

* bool backFeed
[in] Enable/disable back-feed. false: disable back-feed, true: enable back-feed

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-300	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetBackFeed(false);  
  
.....
```

3-10 SetPaper

Set the paper options.

```
int SetPaper(int width, int height, int mediaType, int offset, int gapLength);
```

[Parameters]

- * int width
[in] Paper width. max. 832(4.1 inch) [dot]
- * int height
[in] Paper height. max. 2432(12 inch) [dot]
- * int mediaType
[in] Paper type

Constant	Value	Description
MEDIA_GAP	0	Gap
MEDIA_CONTINUOUS	1	Continuous
MEDIA_BLACKMARK	2	Black Mark

- * int offset
[in] Gap or Blackmark offset
- * int gapLength
[in] Gap length or Blackmark depth [dot]

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetPaper(832, 1261, MEDIA_GAP, 0, 20);  
  
.....
```

3-11 SetMargin

Set the paper margins.

int SetMargin(int horizontalMargin, int verticalMargin)

[Parameters]

* int horizontalMargin
[in] Horizontal margin [dot]

* int verticalMargin
[in] Vertical margin [dot]

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetMargin(10, 10);  
  
.....
```


3-12 SetOffset

Set the offset between Black Mark/Gap and cutting line.

int SetOffset(int offset)

[Parameters]

* int offset
[in] Offset length [dot] (-100 ~ 100)

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
SetOffset(10);  
  
.....
```

3-13 PrintDeviceFont

Print the device font.

```
int PrintDeviceFont(const char *text, const int xPos, const int yPos, const int fontName,
                   const int xMulti, const int yMulti, const int rotation, const bool bold);
```

[Parameters]

- * const char *text
[in] Character strings to print

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * const int fontName
[in] Font name

Barcode	Value	Description
DEVICE_ENG_9X15	0	Size 6 (9 X 15)
DEVICE_ENG_12X20	1	Size 8 (12 X 20)
DEVICE_ENG_16X25	2	Size 10 (16 X 25)
DEVICE_ENG_19X30	3	Size 12 (19 X 30)
DEVICE_ENG_24X38	4	Size 15 (24 X 38)
DEVICE_ENG_32X50	5	Size 20 (32 X 50)
DEVICE_ENG_48X76	6	Size 30 (48 X 76)
DEVICE_ENG_22X34	7	Size 14 (22 X 34)
DEVICE_ENG_28X44	8	Size 18 (28 X 44)
DEVICE_ENG_37X58	9	Size 24 (37 X 58)
DEVICE_KOR_16X16	0x61	Size 1 (16 X 16)
DEVICE_KOR_24X24	0x62	Size 2 (24 X 24)
DEVICE_KOR_20X20	0x63	Size 3 (20 X 20)
DEVICE_KOR_26X26	0x64	Size 4 (26 X 26)
DEVICE_KOR_20X26	0x65	Size 5 (20 X 26)
DEVICE_KOR_38X38	0x66	Size 6 (38 X 38)
DEVICE_CHN_GB2312	0x6D	GB2312 (24 X 24)
DEVICE_CHN_BIG5	0x6E	BIG5 (24 X 24)

- * const int xMulti
[in] Horizontal zoom in (1 ~ 4)

- * const int yMulti
[in] Vertical zoom in (1 ~ 4)

* const int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

* bool bold
[in] Bold. false: disable, true: enable

[Return Values]

Constant	Value	Description
BXL_SUCCESS	0	The function is successful.
BXL_NOT_OPENED	-101	ConnectPrinter must be executed.
BXL_WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
PrintDeviceFont("BIXOLON LABEL SDK TEST.", 20, 10, DEVICE_ENG_24X38,  
                1, 1, ROTATE_0, false);  
Prints(1, 1);  
  
.....
```

3-14 PrintDeviceFontW

Print the device font.

```
int PrintDeviceFontW(const char *text, const int xPos, const int yPos, const int fontName,
                    const int xMulti, const int yMulti, const int rotation, const bool bold,
                    const unsigned codePage);
```

[Parameters]

- * const char *text
[in] Character strings to print

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * const int fontName
[in] Font name

Barcode	Value	Description
DEVICE_ENG_9X15	0	Size 6 (9 X 15)
DEVICE_ENG_12X20	1	Size 8 (12 X 20)
DEVICE_ENG_16X25	2	Size 10 (16 X 25)
DEVICE_ENG_19X30	3	Size 12 (19 X 30)
DEVICE_ENG_24X38	4	Size 15 (24 X 38)
DEVICE_ENG_32X50	5	Size 20 (32 X 50)
DEVICE_ENG_48X76	6	Size 30 (48 X 76)
DEVICE_ENG_22X34	7	Size 14 (22 X 34)
DEVICE_ENG_28X44	8	Size 18 (28 X 44)
DEVICE_ENG_37X58	9	Size 24 (37 X 58)
DEVICE_KOR_16X16	0x61	Size 1 (16 X 16)
DEVICE_KOR_24X24	0x62	Size 2 (24 X 24)
DEVICE_KOR_20X20	0x63	Size 3 (20 X 20)
DEVICE_KOR_26X26	0x64	Size 4 (26 X 26)
DEVICE_KOR_20X26	0x65	Size 5 (20 X 26)
DEVICE_KOR_38X38	0x66	Size 6 (38 X 38)
DEVICE_CHN_GB2312	0x6D	GB2312 (24 X 24)
DEVICE_CHN_BIG5	0x6E	BIG5 (24 X 24)

- * const int xMulti
[in] Horizontal zoom in (1 ~ 4)

- * const int yMulti
[in] Vertical zoom in (1 ~ 4)

* const int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

* bool bold
[in] Bold. false: disable, true: enable

* const unsigned int codePage
[in] Set the encoding type for character strings.

Constant	Value	Description
CP_EUCKR	0	Korean. Encode character strings in EUC-KR.
CP_CP949	1	Korean. Encode character strings in CP949.
CP_EUCCN	2	Chinese. Encode character strings in EUC-CN.
CP_GB18030	3	Chinese. Encode character strings in GB18030.
CP_BIG5	4	Chinese. Encode character strings in BIG5.
CP_CP950	5	Chinese. Encode character strings in CP950.
CP_EUCJP	6	Japanese. Encode character strings in EUC-JP.
CP_CP932	7	Japanese. Encode character strings in CP932.
CP_CP874	8	Thai. Encode character strings in CP874.

[Return Values]

Constant	Value	Description
BXL_SUCCESS	0	The function is successful.
BXL_NOT_OPENED	-101	ConnectPrinter must be executed.
BXL_WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;

ret = ConnectToPrinter("portinfo...");

.....

PrintDeviceFont("BIXOLON Label Printer SDK Test.", 20, 10, DEVICE_ENG_24X38,
                1, 1, ROTATE_0, false, CP_CP949);
Prints(1, 1);

.....
```

3-15 PrintVectorFont

Print the vector font.

Long PrintVectorFont(const char *text, const int xPos, const int yPos, const int font, const int fontWidth, const int fontHeight, const int rightSpace, const bool bold, const bool reverse, const bool italic, const int rotation, const int alignment, const int printDirection)

[Parameters]

- * const char *text
[in] Character strings to print
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * const int font
[in] Font option

Barcode	Value	Description
VECTOR_ASCII	0	ASCII (1Byte Code)
VECTOR_KS5601	1	KS5601(2Byte Code)
VECTOR_BIG5	2	BIG5(2Byte Code)
VECTOR_GB2312	3	GB2312(2Byte Code)
VECTOR_JIS	4	Shift-JIS(2Byte Code)
VECTOR_OCRA	5	OCR-A(1Byte Code)
VECTOR_OCRB	6	OCR-B(1Byte Code)

- * const int fontWidth
[in] Font width [dot]
- * const int fontHeight
[in] Font height [dot]
- * const int rightSpace
[in] Right space [dot]. + / - option can be used.
- * const bool bold
[in] Bold. false: disable, true: enable
- * const bool reverse
[in] Reverse. false: disable, true: enable
- * const bool italic
[in] Italic. false: disable, true: enable

* const int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

* const int alignment
[in] text alignment

Constant	Value	Description
ALIGNMENT_LEFT	0	Align to the left
ALIGNMENT_CENTER	1	Align to the center
ALIGNMENT_RIGHT	2	Align to the right

* int printDirection
[in] print direction for character strings

Constant	Value	Description
LEFT_TO_RIGHT	0	Print from left to right (ex. BIXOLON)
RIGHT_TO_LEFT	1	Print from right to left (ex. NOLOXIB)

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
PrintVectorFont("VECTOR FONT.", 20, 150, VECTOR_ASCII, 10, 10, 3, false, false,  
                false, ROTATE_0, ALIGNMENT_LEFT, LEFT_TO_RIGHT);  
Prints(1, 1);  
  
.....
```

3-16 PrintVectorFontW

Print the vector font.

Long PrintVectorFontW(const char *text, const int xPos, const int yPos, const int font, const int fontWidth, const int fontHeight, const int rightSpace, const bool bold, const bool reverse, const bool italic, const int rotation, const int alignment, const int printDirection, const unsigned int codePage)

[Parameters]

- * const char *text
[in] Character strings to print
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * const int font
[in] Font option

Barcode	Value	Description
VECTOR_ASCII	0	ASCII (1Byte Code)
VECTOR_KS5601	1	KS5601(2Byte Code)
VECTOR_BIG5	2	BIG5(2Byte Code)
VECTOR_GB2312	3	GB2312(2Byte Code)
VECTOR_JIS	4	Shift-JIS(2Byte Code)
VECTOR_OCRA	5	OCR-A(1Byte Code)
VECTOR_OCRB	6	OCR-B(1Byte Code)

- * const int fontWidth
[in] Font width [dot]
- * const int fontHeight
[in] Font height [dot]
- * const int rightSpace
[in] Right space [dot]. + / - option can be used.
- * const bool bold
[in] Bold. false: disable, true: enable
- * const bool reverse
[in] Reverse. false: disable, true: enable
- * const bool italic
[in] Italic. false: disable, true: enable

* const int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

* const int alignment
[in] Text alignment

Constant	Value	Description
ALIGNMENT_LEFT	0	Align to the left
ALIGNMENT_CENTER	1	Align to the center
ALIGNMENT_RIGHT	2	Align to the right

* int printDirection
[in] print direction for character strings

Constant	Value	Description
LEFT_TO_RIGHT	0	Print from left to right (ex. BIXOLON)
RIGHT_TO_LEFT	1	Print from right to left (ex. NOLOXIB)

* const unsigned int codePage
[in] Set the encoding type for character strings.

Constant	Value	Description
CP_EUCKR	0	Korean. Encode character strings in EUC-KR.
CP_CP949	1	Korean. Encode character strings in CP949.
CP_EUCCN	2	Chinese. Encode character strings in EUC-CN.
CP_GB18030	3	Chinese. Encode character strings in GB18030.
CP_BIG5	4	Chinese. Encode character strings in BIG5.
CP_CP950	5	Chinese. Encode character strings in CP950.
CP_EUCJP	6	Japanese. Encode character strings in EUC-JP.
CP_CP932	7	Japanese. Encode character strings in CP932.
CP_CP874	8	Thai. Encode character strings in CP874.

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintVectorFontW("BIXOLON Label Printer SDK Test.", 20, 150, VECTOR_ASCII, 10,  
10, 3, false, false, false, ROTATE_0, ALIGNMENT_LEFT,  
LEFT_TO_RIGHT, CP_CP949);  
Prints(1, 1);  
  
.....
```

3-17 Prints

Print the buffer.

```
int Prints(const int nLabelSet, const int nCopies);
```

[Parameters]

- * const int nLabelSet
[in] Number of label sets (1 ~ 65535)

- * const int nCopies
[in] Number of label copies (1 ~ 65535)

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
Prints(1, 1);  
  
.....
```

3-18 Print1DBarcode

Print 1-dimensional barcode.

```
int Print1DBarcode(const char *barcodeData, const int xPos, const int yPos,
                  const int barcodeType, const int narrowBarWidth,
                  const int wideBarWidth, const int barcodeHeight, const int rotation,
                  const int HRI);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * const int barcodeType
[in] Define barcode type. Defined in bxlConst.h.

Barcode	Value	Description
BAR_CODE39	0	Code39
BAR_CODE128	1	Code128
BAR_I2OF5	2	Interleaved 2of5
BAR_CODABAR	3	Codabar
BAR_CODE93	4	Code93
BAR_UPCA	5	UPC-A
BAR_UPCE	6	UPC-E
BAR_EAN13	7	EAN13
BAR_EAN8	8	EAN8
BAR_EAN128	9	UCC/EAN128
BAR_CODE11	10	Code11
BAR_PLANET	11	Planet
BAR_INDUSTRIAL2OF5	12	Industrial 2of5
BAR_STANDARD2OF5	13	Standard 2of5
BAR_LOGMARS	14	logmars
BAR_EXTENSION	15	UPC/EAN Extensions
BAR_POSTNET	16	Postnet

- * int narrowBarWidth
[in] Set the narrow bar width in the unit of Dot.
- * int wideBarWidth
[in] Set the wide bar width in the unit of Dot.
- * int barcodeHeight
[in] Set the barcode height in the unit of Dot.

* int rotation
[in] Set the rotation value.

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

* int HRI
[in] Set the HRI printing position and size in the range between 0 and 8.

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;

ret = ConnectToPrinter("portinfo...");

.....
Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_CODE39, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_CODE128, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_I2OF5, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_CODABAR, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_CODE93, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_UPCA, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_UPCE, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_EAN13, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_EAN8, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

Print1DBarcode("123456789012", 220, 60, BXL_1DBAR_EAN128, 2, 5, 100, BXL_ROTATE_90, 1);
Prints(1, 1);

.....
```

3-19 PrintMaxiCode

Print 2-dimensional barcode (Maxicode).

```
int PrintMaxiCode(const char *barcodeData, const int xPos, const int yPos,  
                 const int mode);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * const int mode
[in] Maxicode mode

Constant	Value	Description
MAXICODE_MODE0	0	Mode 0
MAXICODE_MODE90	2	Mode 2
MAXICODE_MODE180	3	Mode 3
MAXICODE_MODE270	4	Mode 4

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintMaxiCode("990,840,06840,THIS IS A TEST OF MODE 0 BIXOLON LABEL  
                PRINTER", 30, 100, MAXICODE_MODE0);  
Prints(1, 1);  
  
.....
```

3-20 PrintPDF417

Print 2-dimensional barcode (PDF417).

```
int PrintBarcode(const char *barcodeData, const int xPos, const int yPos,  
                const int verticalCount, const int horizontalCount, int errorLevel,  
                int dataComp, bool HRI, int startPosition, int moduleWidth,  
                int barHeight, int rotation);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * int verticalCount
[in] Max. vertical count: 3 ~ 90

- * int horizontalCount
[in] Max. vertical count: 1 ~ 30

- * int errorLevel
[in] Error correction level. Defined in bxlConst.h.

Barcode	Value	Description
PDF417_ECL0	0	EC Level: 0. EC Codeword: 2
PDF417_ECL1	1	EC Level: 1. EC Codeword: 4
PDF417_ECL2	2	EC Level: 2. EC Codeword: 8
PDF417_ECL3	3	EC Level: 3. EC Codeword: 16
PDF417_ECL4	4	EC Level: 4. EC Codeword: 32
PDF417_ECL5	5	EC Level: 5. EC Codeword: 64
PDF417_ECL6	6	EC Level: 6. EC Codeword: 128
PDF417_ECL7	7	EC Level: 7. EC Codeword: 256
PDF417_ECL8	8	EC Level: 8. EC Codeword: 512

- * int dataComp
[in] Data compression method. Defined in bxlConst.h.

Constant	Value	Description
PDF417_COMP_TEXT	0	2 Characters per codeword.
PDF417_COMP_NUM	1	2.93 Characters per codeword.
PDF417_COMP_BINARY	2	1.2 Bytes per codeword.

- * bool HRI
[in] Set the HRI printing option

- * int startPosition
[in] 0: starts from the center of the barcode, 1: starts from the top left corner of the barcode

- * int moduleWidth
[in] Set the module width (2 ~ 9).

- * int barHeight
[in] Set the bar height (4 ~ 99).

- * int rotation
[in] Set the rotation value.

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintPDF417("BIXOLON Label Printer, This is Test Printing.", 30, 100, 30, 5,  
             PDF417_ECL0, PDF417_COMP_TEXT, true, 1, 3, 10, ROTATE_0);  
Prints(1, 1);  
  
.....
```


3-21 PrintQRCode

Print 2-dimensional barcode (QR Code).

```
int PrintQRCode(const char *barcodeData, const int xPos, const int yPos, int model,  
               const int eccLevel, int barSize, int rotation);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * int model
[in] Model option. 1: Model 1, 2: Model 2

- * int eccLevel
[in] ECC level

Constant	Value	Description
QRCODE_ECC7	0	Recovery rate 7%
QRCODE_ECC15	1	Recovery rate 15%
QRCODE_ECC25	2	Recovery rate 25%
QRCODE_ECC30	3	Recovery rate 30%

- * int barSize
[in] Barcode size setting (1 ~ 4).

- * int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintQRCode("ABCDEFGHJKLMN1234567890", 30, 100, 1, QRCODE_ECC7,  
             4, ROTATE_0);  
Prints(1, 1);  
  
.....
```

3-22 PrintDataMatrix

Print 2-dimensional barcode (Data Matrix).

```
int PrintDataMatrix(const char *barcodeData, const int xPos, const int yPos,  
                   int barSize, bool reverse, int rotation);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * int barSize
[in] Barcode size setting (1 ~ 4)
- * bool reverse
[in] Barcode reverse. false: disable, true: enable
- * int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintDataMatrix("BIXOLON Label Printer", 30, 100, 4, false, ROTATE_0);  
Prints(1, 1);  
  
.....
```

3-23 PrintAztec

Print 2-dimensional barcode (Aztec).

```
int PrintAztec(const char *barcodeData, const int xPos, const int yPos, int barSize,  
              int interpretation, int errCodeNSymbolSize, bool menuSymbol,  
              int numOfSymbol, int optID, int rotation);
```

[Parameters]

* const char *barcodeData
[in] Barcode printing data

* const int xPos
[in] Horizontal position (X) [dot]

* const int yPos
[in] Vertical position (Y) [dot]

* int barSize
[in] Barcode size setting (1 ~ 10).

* int interpretation
[in] ECI (Extended Channel Interpretation) code setting. 0: disable, 1: enable.

* int errCodeNSymbolSize
[in] Error code and symbol size/type

Value	Description
0	Default error collection level
1 ~ 99	Error collection percent
101 ~ 104	1 ~ 4 layer compact symbol
201 ~ 232	1 ~ 32 layer full range symbol
300	Simple Aztec "Rune"

* bool menuSymbol
[in] Menu symbol

* bool numOfSymbol
[in] Number of symbols for structured append (1 ~ 26)

* int optID
[in] Optional ID filed for structured append : ID field string (max. 24 characters)

* int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintAztec("THIS IS AZTEC BARCODE TESTTHIS IS AZTEC BARCODE TEST",  
            30, 100, 5, 0, 0, true, 1, 1, ROTATE_0);  
Prints(1, 1);  
  
.....
```

3-24 PrintCode49

Print 2-dimensional barcode (Code49).

```
int PrintCode49(const char *barcodeData, const int xPos, const int yPos,  
               const int narrowWidth, const int wideWidth, const int barHeight,  
               int HRI, int startingMode, int rotation);
```

[Parameters]

* const char *barcodeData
[in] Barcode printing data

* const int xPos
[in] Horizontal position (X) [dot]

* const int yPos
[in] Vertical position (Y) [dot]

* const int narrowWidth
[in] Narrow bar width [dot]

* const int wideWidth
[in] Wide bar width [dot]

* const int barHeight
[in] Barcode height [dot]

* int HRI
[in] HRI printing. 0: No printing, 1: Below the barcode, 2: Above the barcode

* int startingMode
[in] starting mode

Value	Description
0	Regular Alphanumeric Mode
1	Multiple Read Alphanumeric
2	Regular Numeric Mode
3	Group Alphanumeric Mode
4	Regular Alphanumeric Shift 1
5	Regular Alphanumeric Shift 2
7	Automatic Mode

* int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
PrintCode49("12345ABC", 30, 100, 2, 7, 22, 2, 7, ROTATE_0);  
  
Prints(1, 1);  
  
.....
```

3-25 PrintCODABLOCK

Print 2-dimensional barcode (CODABLOCK).

```
int PrintCODABLOCK(const char *barcodeData, const int xPos, const int yPos,  
                  const int narrowWidth, const int wideWidth, const int barHeight,  
                  const bool security, int dataColumns, int mode, int encodeRow);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data

- * const int xPos
[in] Horizontal position (X) [dot]

- * const int yPos
[in] Vertical position (Y) [dot]

- * const int narrowWidth
[in] Narrow bar width [dot]

- * const int wideWidth
[in] Wide bar width [dot]

- * const int barHeight
[in] Barcode height [dot]

- * const bool security
[in] Security function

- * int dataColumns
[in] Number of characters per line (2 ~ 62)

- * int mode
[in] Mode

Constant	Value	Description
CODABLOCK_A	0	Use Code 39 character set
CODABLOCK_E	1	Use Code 128 character set
CODABLOCK_F	2	Add Code 128 character set and Function 1 (FNC1) automatically

- * int encodeRow
[in] Number of lines to encode

Value	Description
A	1 ~ 18
E	2 ~ 4
F	2 ~ 4

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
PrintCODABLOCK("BIXOLON BARCODE TEST 123BIXOLON BARCODE TEST 123",  
                 30, 100, 2, 5, 30, false, 30, CODABLOCK_E, 4);  
Prints(1, 1);  
  
.....
```

3-26 PrintMicroPDF

Print 2-dimensional barcode (Micro-PDF417).

```
int PrintMicroPDF(const char *barcodeData, const int xPos, const int yPos,  
                 int moduleWidth, int barHeight, int mode, int rotation);
```

[Parameters]

- * const char *barcodeData
[in] Barcode printing data
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * int moduleWidth
[in] Module width (2 ~ 8)
- * int barHeight
[in] Barcode height (1 ~ 99) [dot]
- * int mode
[in] Mode (0 ~ 33), refer to the command manual for details.
- * int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
ret = ConnectToPrinter("portinfo...");  
.....  
PrintMicroPDF("ABCDEFGHJKLMN1234567890", 30, 100, 2, 6, 8, ROTATE_0);  
Prints(1, 1);  
.....
```

3-27 PrintGS1DataBar

Print GS1 DataBar barcode.

Long PrintGS1DataBar(const char *barcodeData, const int xPos, const int yPos,
int barcodeType, int expand, int separatorHeight,
int barHeight, int segmentWidth, int rotation);

[Parameters]

* const char *barcodeData
[in] Barcode printing data

* const int xPos
[in] Horizontal position (X) [dot]

* const int yPos
[in] Vertical position (Y) [dot]

* int barcodeType
[in] Barcode type

Constant	Value	Description
GS1DATABAR	0	GS1 DataBar
GS1DATABAR_TRUNCATED	1	GS1 DataBar Truncated
GS1DATABAR_STACKED	2	GS1 DataBar Stacked
GS1DATABAR_STACKED_OMNIDIRECTIONAL	3	GS1 DataBar Stacked Omnidirectional
GS1DATABAR_LIMITED	4	GS1 Limited
GS1DATABAR_EXPANDED	5	GS1 Expanded

* int expand
[in] Zoom in (1 ~ 10)

* int separatorHeight
[in] Separator height (1 ~ 2)

* int barHeight
[in] Barcode height

* int segmentWidth
[in] Segment width (0 ~ 22. even numbers only)

* int rotation
[in] Rotation value

Constant	Value	Description
ROTATE_0	0	Rotate by 0 degree
ROTATE_90	1	Rotate by 90 degrees
ROTATE_180	2	Rotate by 180 degrees
ROTATE_270	3	Rotate by 270 degrees

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
.....  
PrintGS1DataBar("0102005190000570031512291036310300050091320000050304",  
30, 100, GS1DATABAR_EXPANDED, 2, 2, 17, 10, ROTATE_0);  
Prints(1, 1);  
.....
```

3-28 PrintBlock

Print lines, blocks, boxes and slopes.

```
int PrintBlock(const int xStart, const int yStart, const int xEnd, const int yEnd,  
              const int option, const int thickness);
```

[Parameters]

- * const int xStart
[in] X-axis starting coordinate [dot]
- * const int yStart
[in] Y-axis starting coordinate [dot]
- * const int xEnd
[in] X-axis end coordinate [dot]
- * const int yEnd
[in] Y-axis end coordinate [dot]
- * const int option
[in] Mode (0 ~ 33), refer to the command manual for details.

Constant	Value	Description
BLOCK_OVERWRITE	0	Line Overwriting
BLOCK_EXCLUSIVEOR	1	Line Exclusive OR
BLOCK_DELETE	2	Delete line
BLOCK_SLOPE	3	Slope
BLOCK_BOX	4	Box

- * int thickness
[in] Applicable to line thickness, slope and box only.

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
.....  
  
PrintBlock(20, 20, 300, 300, BLOCK_BOX, 10);  
PrintBlock(400, 20, 20, 500, BLOCK_SLOPE, 10);  
  
Prints(1, 1);  
  
.....
```

3-29 PrintCircle

Print circles.

```
int PrintCircle(const int xPos, const int yPos, int size, int multi);
```

[Parameters]

* const int xPos
[in] Horizontal position (X) [dot]

* const int yPos
[in] Vertical position (Y) [dot]

* int size
[in] Circle size (1 ~ 6)

* int multi
[in] Zoom in (1 ~ 4)

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
.....  
  
PrintCircle(150, 150, 4, 1);  
  
Prints(1, 1);  
  
.....
```


3-30 PrintImage

Select and print image files (bmp, jpg, gif).

```
int PrintImage(const char *imagePath, const int xPos, const int yPos,  
              const bool compress);
```

[Parameters]

- * const char *imagePath
[in] Image file path
- * const int xPos
[in] Horizontal position (X) [dot]
- * const int yPos
[in] Vertical position (Y) [dot]
- * const bool compress
[in] Compression

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
IMAGE_OPEN_ERROR	-118	The image file cannot be opened.
MEM_ALLOC_ERROR	-120	The allocation of internal memory failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
char *imgPath = ".....";  
  
PrintImage(imgPath, 150, 150, false);  
  
Prints(1, 1);  
  
.....
```

3-31 DirectIO

Send SLCS commands directly and retrieve calls.

```
int DirectIO(const char *writeData, const wirtLen, char *readData, int *readLen);
```

[Parameters]

* const char *writeData
[in] Data to send

* const int writeLen
[in] Length of the data to send

* char *readData
[in] Data buffer to be read

* int *readLen
[in] Send the length of the data to be read and receive the length of the data that has been read.

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.
READ_ERROR	-106	Data reception failed.

* Example

```
int ret;  
char cmd = "T20,20,3,1,1,0,0,N,N,\BIXOLON Label Printer\"";  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
DirectIO(cmd, strlen(cmd), NULL, 0);  
  
.....
```

3-32 CalibrateMedia

Support auto calibration.

```
int CalibrateMedia();
```

[Parameters]

None

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
ret = ConnectToPrinter("portinfo...");  
.....  
CalibrateMedia();  
.....
```

3-33 ResetPrinter

Reboot the printer.

```
int ResetPrinter();
```

[Parameters]

None

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
ResetPrinter();  
  
.....
```

3-34 ClearBuffer

Delete the image buffer data of the printer.

```
int ClearBuffer();
```

[Parameters]

None

[Return Values]

Constant	Value	Description
SUCCESS	0	The function is successful.
WRITE_ERROR	-105	Data transmission failed.

* Example

```
int ret;  
  
ret = ConnectToPrinter("portinfo...");  
  
.....  
  
ClearBuffer();  
  
.....
```