 




1. Turn the Power Switch Off at the rear of the Printer.




2. Open the printer cover. And Insert tweezers (recommended) into the Right hole (yellow dotted line) of the Cover STD, then press it inward (yellow arrow) to disassemble it.
 ※ You can also remove it by pressing the left side in the same manner.

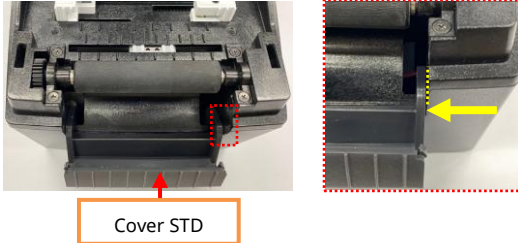

3. Insert the Auto Cutter Wire into the Wire Hole.

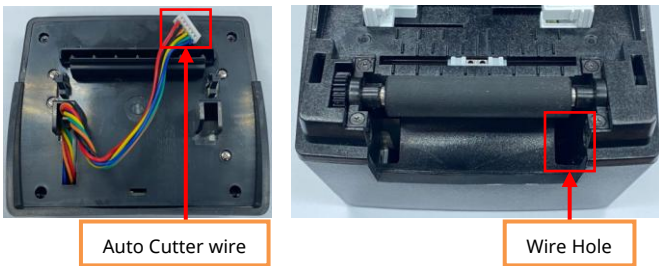


4. Engage the Hooks (red circles) with the square-shaped sockets (yellow squares) in the order from top to bottom.
 ※ Be careful that the Wire does not get stuck.

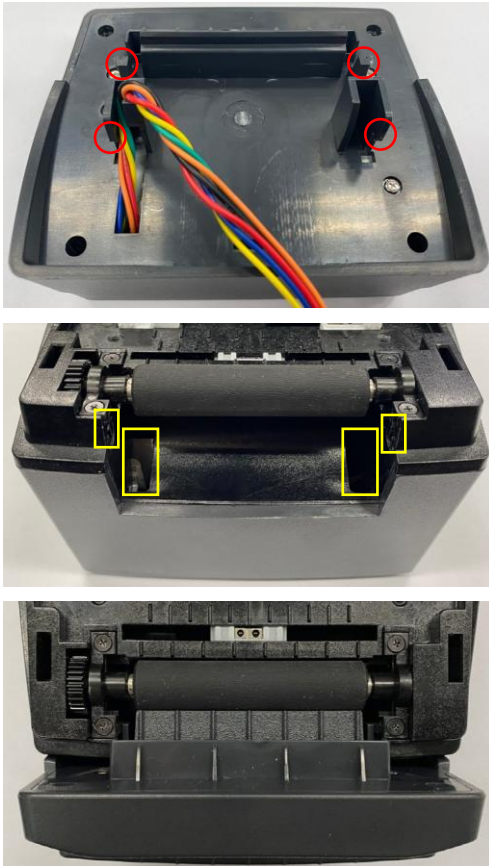


5. Place the bottom of the Printer face the front.


- ※ SLP-DX22x: Disassemble the Cover DIP by pressing the Hook (Yellow circle) inward.
 - ※ SLP-TX22x: After removing one screw (Yellow square) using a screwdriver, then disassemble the Cover DIP.
- Arrange the Auto Cutter Wire so that it looks like the picture below.
 ※ Be careful to avoid tangling with other Wires when shaping.

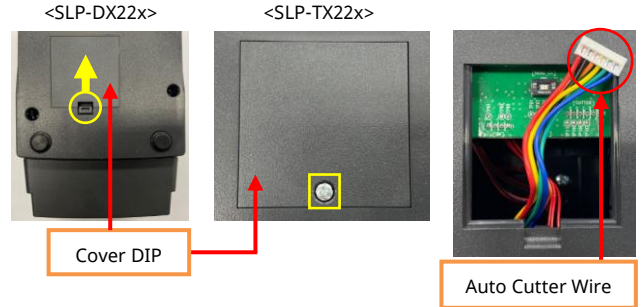

6. Insert the Auto Cutter Wire into the Auto Cutter Connector (red square) in the correct direction.

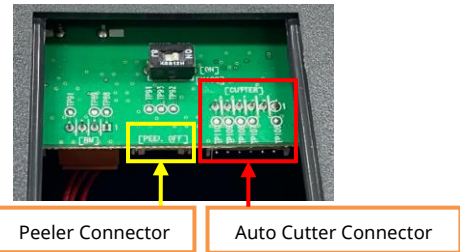


7. Reassemble the Cover DIP that was removed in step 5.

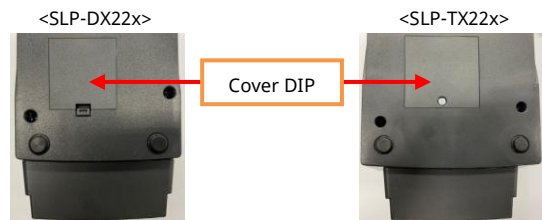


8. In order to operate the Auto Cutter, the settings must be changed through the utility. Access the Bixolon webpage (www.bixolon.com) and download the Unified Label Utility.


Connect the communication cable (USB) and Turn the Printer power On.
 Then, change the settings in the following order.

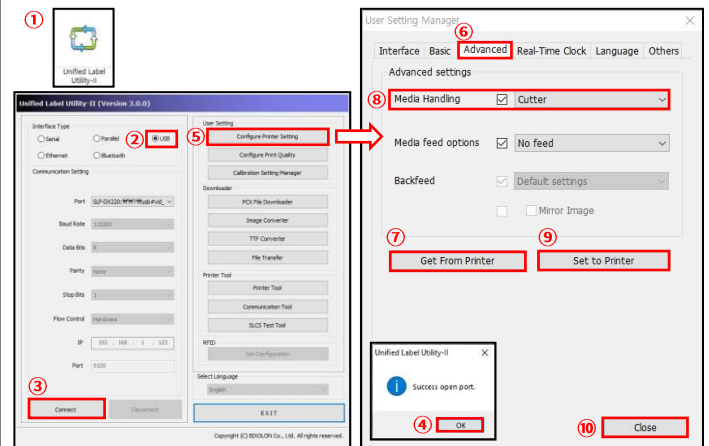

 
1. Printer 후면의 Power Switch 를 Off 하십시오.




2. Printer 를 열어 주십시오. 그 다음 Cover STD의 우측 홈 부분(노란색 점선)에 핀셋을 넣은 다음 내측방향(노란색 화살표)으로 눌러 분리하십시오.
※ 같은 방법으로 좌측을 눌러 분리해도 무관합니다.

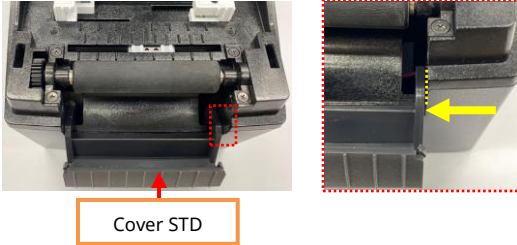

3. Auto Cutter Wire 를 Wire Hole 에 삽입하십시오.

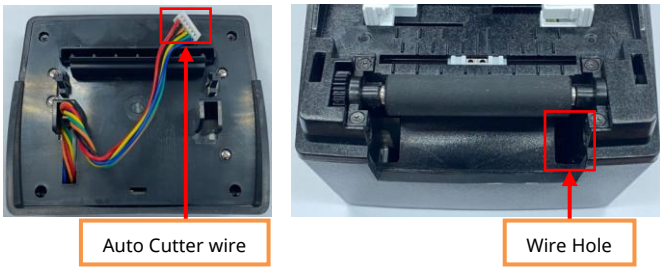


4. 빨간색 원 표시 부의 Hook 를 노란색 사각형 홈에 맞추어 상측에서 하측으로 조립하십시오.
※ 조립 시 Wire 가 끼이지 않도록 주의하십시오.

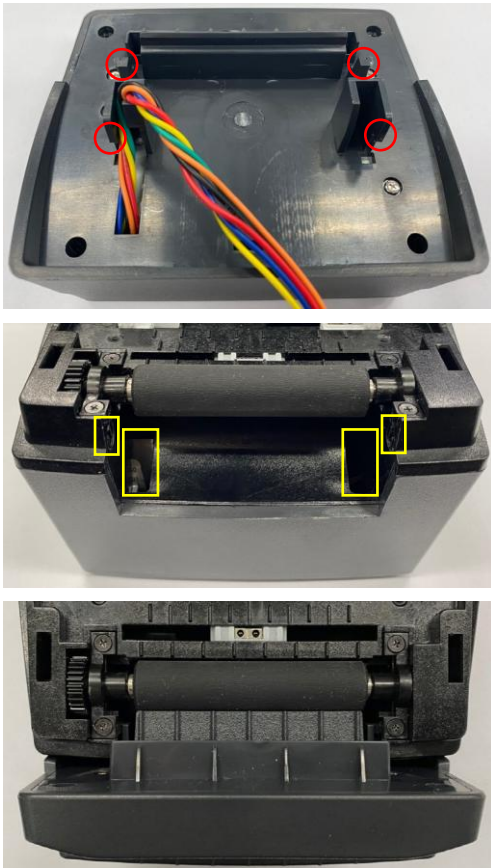


5. Printer 바닥 면이 정면으로 향하게 하십시오.

※ SLP-DX22x 모델은 Hook(노란색 원)를 내측 방향으로 눌러 Cover DIP 을 분리하십시오.
※ SLP-TX22x 모델은 십자 드라이버를 사용하여 스크류 1 개소(노란색 사각형)를 풀은 다음 Cover DIP 을 분리하십시오.
Auto Cutter Wire 를 하기 그림과 같이 보이게 정형 하십시오.
※ 다른 Wire 와 꼬이지 않게 정형 하십시오.

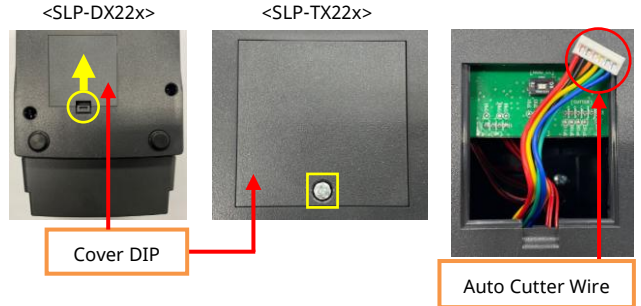


6. Auto Cutter Wire 를 방향에 맞추어 Auto Cutter Connector(빨간색 사각형)에 삽입하십시오.

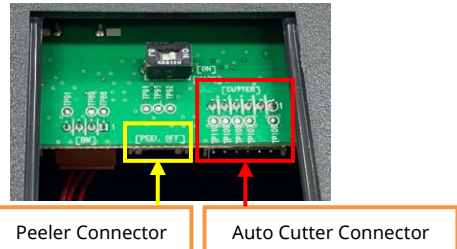

7. 순서 5 에서 분리한 Cover DIP 을 재 조립 하십시오.



8. Auto Cutter 를 작동시키기 위해서는 유틸리티를 통해 설정 값을 변경해야 합니다. 빅솔론 홈페이지(www.bixolon.com)에 접속하여 라벨 통합 유틸리티를 다운 받은 후, 통신 케이블(USB) 연결 및 Printer 의 전원을 켜 다음 하기 순서대로 설정을 변경해 주십시오.

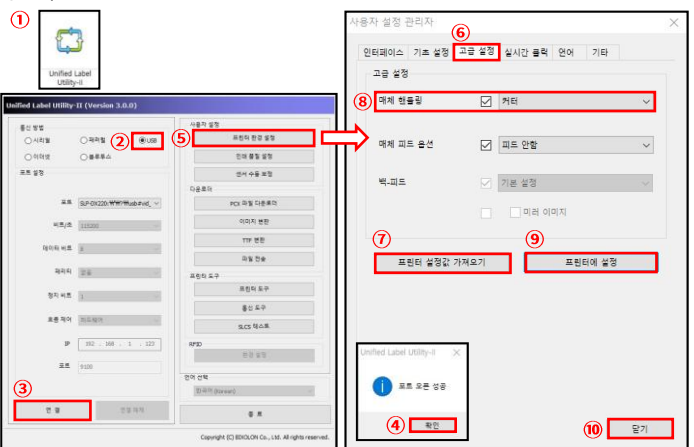

① 'Unified Label Utility' 실행

② 'USB' 클릭!

③ '연결' 클릭!

④ '확인' 클릭!

⑤ '프린터 환경 설정' 클릭!

⑥ '고급 설정' 클릭!

⑦ '프린터 설정값 가져오기' 클릭!

⑧ 매체 핸들링 '커터' 섹팅!

⑨ '프린터에 설정' 클릭!

⑩ '닫기' 클릭!