
 



How to Replace TPH


KN04-00218A (Ver.1.0) XT5 Series




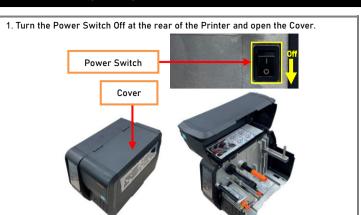




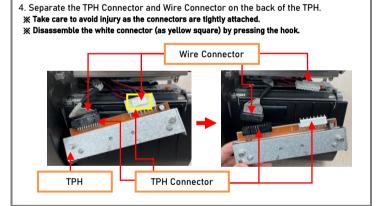


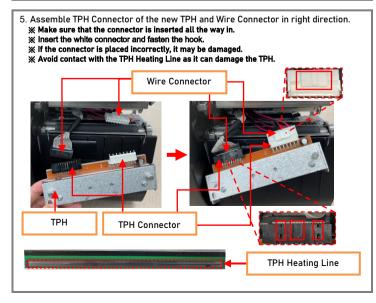

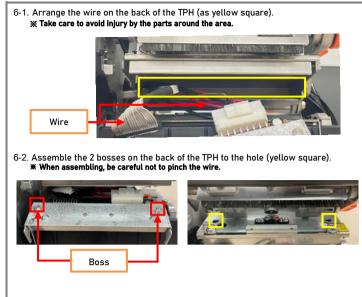

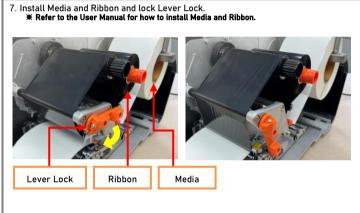



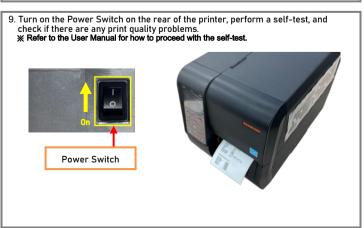


TPH 교체 방법


KN04-00218A (Ver.1.0) XT5 시리즈







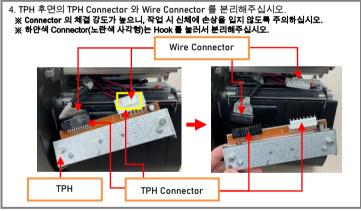

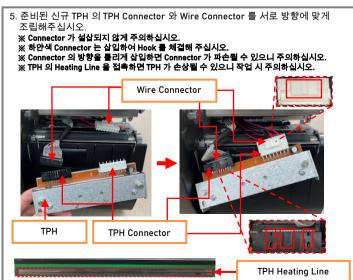





Boss



